

# Installation Guidelines


## Self-Centred Standoffs

SKU: SELF-CENTERED



### Installations Tips

#### Installing Signs beside doors:

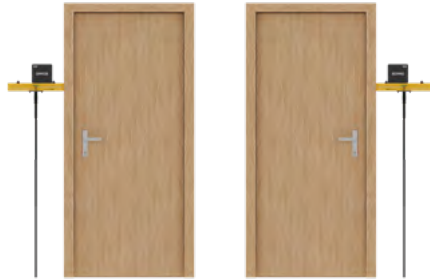


Always check the installation surface to ensure that the substrate will be strong enough to hold the weight of the panel. All installation must be done so with proper hardware and protective gears to ensure safety. It is important to check that parts are properly tightened at the end of each installation.

1 Attach the tool to the monopod using the bracket, then adjust the height to match the sign.

2 Set the end stops to the required offset using the front ruler, placing one on each side to align with the door casing and handle position.

3 Place the assembly against the door casing, level it, then apply the sign using the tool and end stop for positioning.

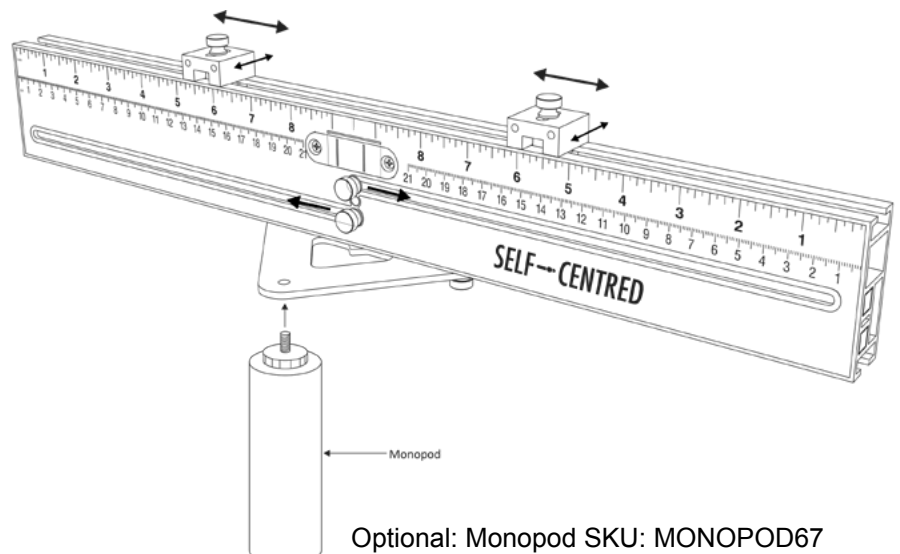

#### Installing Signs Centered on doors:

1 Attach the tool to the monopod and set it to the sign's baseline height.

2 Set the end stops to the sign width using the rear ruler, leaving a little extra space for fit.

3 Place the assembly near the door center, loosen the thumb screws, slide out the rails, then tighten them.

